

**Parts Explanation 各部位名稱:**



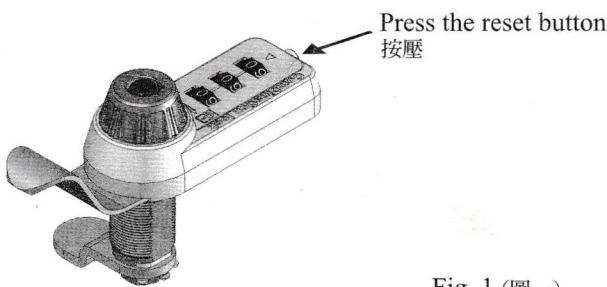


Fig. 1 (圖一)


 
 
Fig. 2 (圖二)

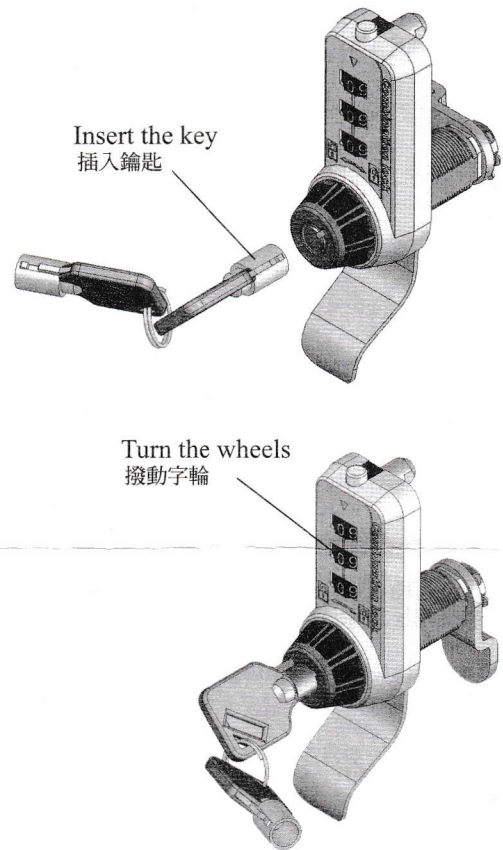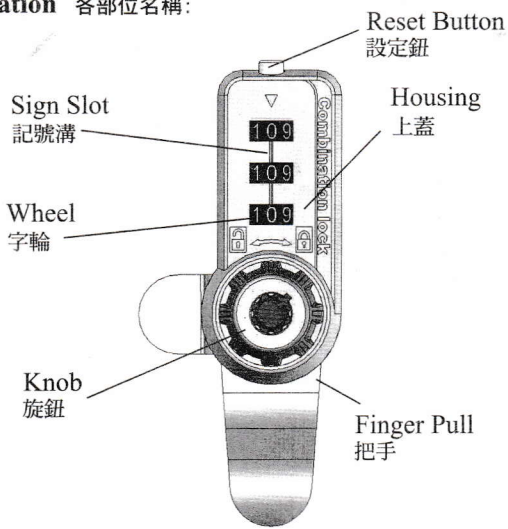


**Remark: Finger pull is optional component by customer 註: 把手為選配**

**I. Manufacturer combination 初始設定:**



 

1. Manufacturer Combination code be set at 0-0-0.  
出廠「開啟」號碼為0-0-0

**II. Reset new combination code 重新設定新號碼:**

1. Make sure the knob stays at 『』 position then turn the wheels to the correct combination code.
2. Push down and hold the reset button (as Fig. 1) until you have done the new code resetting. Turn the 3 wheels to your desired new combination code and release the reset button.
3. Turn the knob to 『』 -opening position. Congratulation! You have done the new code resetting.
4. Turn the knob back to 『』 then random your combination code, it is locked now!


 
- 一、設定新號碼時，請先確認旋鈕在『』位置後調整字輪為『開啟』狀態。
- 二、按壓尾端的設定鈕按住不放(如圖一)，調整至新的號碼後，鬆開設定鈕。
- 三、再將旋鈕轉動確認為『』狀態，此時字輪的號碼，即為新設定之密碼。
- 四、再將旋鈕轉回『』位置後撥亂號碼，此時為『上鎖』狀態。

 
 
**III. How to unlock 開鎖使用方法:**

1. Way #1: Turn the 3 wheels to your key codes then turn the knob to 『』 position.
2. Way #2: When the 3 wheels are incorrect, please insert the key to the knob then turn the knob to 『』 position.  
一、方法#1: 撥動字輪至所設定的號碼，轉動旋鈕在『』位置即為開鎖完成。  
二、方法#2: 字輪在非設定的正確號碼時，使用Key插入旋鈕內並將Key轉至開啟位置『』即可開鎖。

**IV. Recall your forgotten codes 忘記號碼之尋號之步驟:**

**How to recall your forgotten codes 尋回遺忘之號碼方法:**

1. Insert the key into the knob then turn the key to 『』 position. Turn the 3 wheels in sequence until it is stuck. (as Fig.2) The stuck numbers are your forgotten codes.
2. Please turn the key to 『』 position then pull out the key. Congratulation! The forgotten codes are recalled successfully!

- 一、使用Key插入旋鈕內並將Key轉至開啟位置『』，撥動字輪直至無法撥動字輪為止(如圖二)，依序找出三碼，此三碼即為遺忘之號碼。
- 二、將Key轉回上鎖位置『』，再把Key拔出即完成尋回遺忘之號碼。