

ATLAS EL703

Electronic Cabinet Lock



**ATLAS
LOCKS**

Installation &
Operating instructions
(READ THESE)



ONE TIME USER MODE:

How to turn on one time user mode & set password:

The lock can also be set to one time user mode also called gymnasium mode, the user enters their own personal 4-15 digit code, this locks the lock. The same code is entered to open the lock and left open ready for the next new user to enter their code which will now be the new code.

This function is for short term situations like a locker in a gymnasium.

First turn on one time user mode

1. Input current management code and OK, buzzer gives out a single beep and unlocking LED is on
2. Press OK for at least 2 seconds, unlocking LED twinkles.
3. Input 4 4 press OK, when you hear a single beep sound this means one time user mode has been set.

How to set one time user password

1. To first set the one time user code press OK, unlocking indicator LED will twinkle
2. Input new code 4 to 15 digits long
3. Press OK the buzzer gives a single beep, your one time user code has now been set.
4. When you return to open the lock **just press your code and then OK**
5. LED Flashes every 3 seconds to show the lock is in use, **one time user passcode can be used one time only**
6. Next locker user repeats steps 1-4

How to turn off one time user mode

1. Input current management code and OK, buzzer gives out a single beep and unlocking LED is on.
2. Press OK for at least 2 seconds, unlocking LED flashes.
3. Input 4 3 press OK, when you hear a single beep sound this means one time user mode has been turned off.

OPERATING INSTRUCTIONS:

1. Lift rear battery tray and insert 4 x AA Alkaline batteries
2. Input factory default user code 1234 and "OK" or input factory management code 12345678 and "OK"
3. Buzzer gives a beep and green LED will flash, the lock will open automatically
4. Lock Latch will extend automatically after 5 seconds
5. To lock just close the door

Setting:


The lock is preset as the default to private use mode where the same code of your choice is used each time to open the lock (this is the most common setting)

PRIVATE USE MODE:

How to change user code or management code:

1. Input current user code 1234 and "C" or management code 12345678 and "C", buzzer beeps and the unlocking indicator LED will blink
2. Input new code and "OK" when the buzzer beeps the new code has been set
3. Password code can be 4-15 digits long
4. Note the management code cannot be the same as the user password code

DO NOT CLOSE THE DOOR AFTER LOCK INSTALLATION UNTIL BATTERIES INSTALLED AND TEST LOCK FUNCTIONS OK

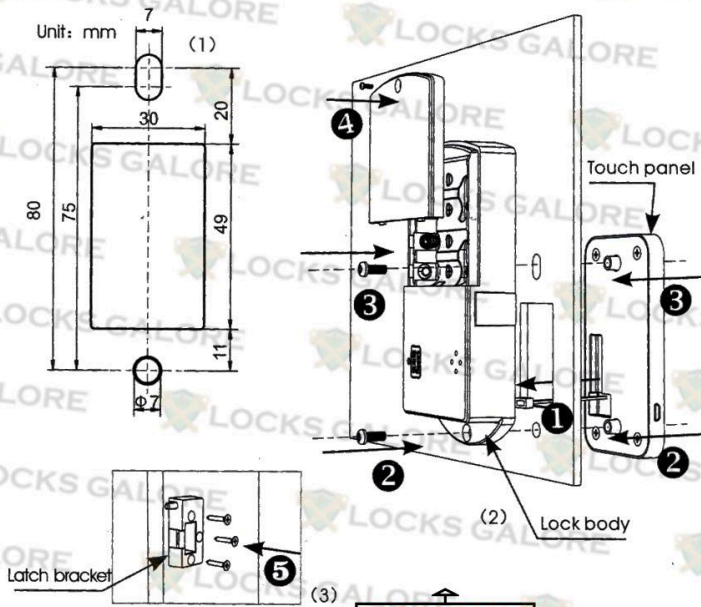

ANTI-THEFT FAKE PIN CODE FUNCTION:

- In this mode you can input any code before or after the real password to prevent the real password being seen by someone else, maximum 16 digits.

1. Input current management code and OK, buzzer gives out a single beep and unlocking LED is on.
2. Press OK for at least 2 seconds, unlocking LED flashes.
3. Input 4 2 press OK, when you hear a single beep sound this means the Fake PIN code mode has been turned on.
4. To turn off fake PIN code repeat steps 1 and 2 and then input 4 1 press OK, when you hear a single beep sound this means the Fake PIN code mode has been turned off

INSTALLATION NOTES:

Clearance gap between edge of lock body and striker plate needs to be a minimum of 3mm to allow latch to self close properly when closing the door.

Can be fitted to doors 10mm to 19mm thick.

When installation is finished ensure batteries are fitted and test lock functions okay before closing the door.

After installation peel off front protective film on keypad

NOTES:

- Three tones in short succession indicates wrong code.
- Three tones and green indicator LED on mean the lock is running on low voltage, replace the batteries.
- Lock will not operate if battery is too low.
- You can use a USB cable to power the lock from a portable device.
- After using management code, user code is reset to default 1-2-3-4.
- Entering an incorrect password 4 times will lock keypad and tones will sound periodically for 60 seconds.
- Last password will not be lost after changing the batteries.

Reset button: Press a folded up paper clip into reset hole, you will hear two beeps and the user code and master code will reset to default codes.

